


Overview

Lexan film fastener Type 2 - Bottom - PU = 100 pcs

Product number: 68100302

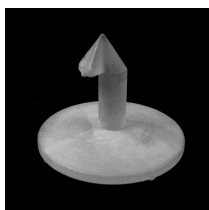

Options

Version

Type 1 - Buttom

Type 1 - Top

Type 1 - complete

Type 2 - Complete

Type 2 - Top

Type 2 / Buttom

Description

Our film fasteners are applied for attaching a bubble wrap as an additional isolating material to greenhouse walls (glass or twin-wall sheets).

Bubble wrap is impaled onto the bottom part of the film fastener previously sticked with silicon onto the wall. Afterwards the upper part of the film fastener is screwed up from above to firmly fix the bubble wrap.

Created at 27.06.2025.

* Our offers are directed exclusively to companies. We do not conclude contracts with consumers. All prices excl. VAT plus shipping costs and possible delivery charges, if not stated otherwise.



Fiberlane LLC - 9254
Richmond Road - 18013
Bangor, PA

Tel.: +1 610 498 447 4
Fax.: +1 610 498 2602

email:
info(at)fiberlanellc.com

The upper part of the film fastener can easily be unscrewed to be newly applied during winter seasons.